



1 Prepare your design/file as vector PDF or EPS. Copy, size and nest accordingly.




2 Send file to the printer direct, from the DTFMagic RIP.



3 The automatic finisher cures the transfer with adhesive powder.




4 The automatic finisher shakes off excess powder for re-use

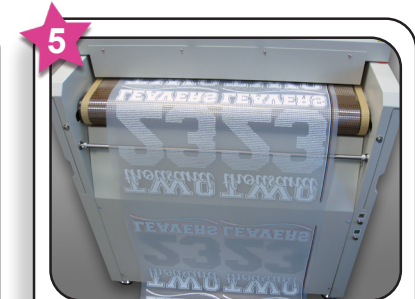

5 Cut off the finished transfer.



6 Pre press the garment to remove any creases and position the transfer.

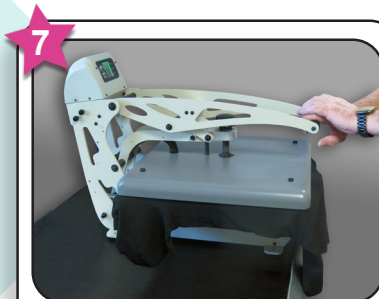

7 Press at 150°C for 15 seconds.



8 Peel warm or cold, depending on your Film.



9 Seal with release paper or PTFE sheet for matte or gloss finish.